

# HarmonicPlanetary® HPGP High Torque Series

## Size

11, 14, 20, 32, 50, 65

6  
Sizes

## Peak Torque

12Nm – 3940Nm

## Reduction Ratio

Single Stage: 4:1 to 5:1, Two Stage: 11:1 to 45:1

## Low Backlash

Standard: <3 arc-min Optional: <1 arc-min

### Low Backlash for Life

Innovative ring gear automatically adjusts for backlash, ensuring consistent, low backlash for the life of the gearhead. The ring gear design automatically provides the optimum backlash in the planetary gear train and maintains the same low backlash for the life of the gearhead.

## High Efficiency

Up to 95%

## High Load Capacity Output Bearing

A Cross Roller bearing is integrated with the output flange to provide high moment stiffness, high load capacity and precise positioning accuracy.

## Easy mounting to a wide variety of servomotors

Quick Connect™ coupling



# CONTENTS


Rating Table.....	2
Performance .....	3
Backlash and Torsional Stiffness .....	4
Outline Dimensions .....	5-10
Product Sizing & Selection .....	11-12

**HPGP - 11 A - 05 - BL3 - D - F0 - Motor Code**

Model Name	Size	Design Revision	Reduction Ratio	Backlash	Input Side Bearing	Output Configuration	Input Configuration & Options
Harmonic Planetary® <b>HPGP</b> High Torque	11	A	5, 21, 37, 45	BL1: Backlash less than 1 arc-min (Sizes 14 to 65)	D: Input side contact sealed bearing (DDU)	F0: Flange output J20: Shaft output without key J60: Shaft output with key and center tapped hole	This code represents the motor mounting configuration. Please contact us for a unique part number based on the motor you are using.
	14		5, 11, 15, 21, 33, 45	BL3: Backlash less than 3 arc-min	Z: Input side bearing with double non-contact shields	F0: Flange output J2: Shaft output without key J6: Shaft output with key and center tapped hole (J2, J6 for Size 65 is also available)	
	20						
	32						
	50						
	65		4, 5, 12, 15, 20, 25				

## Gearhead Construction

Figure 018-1

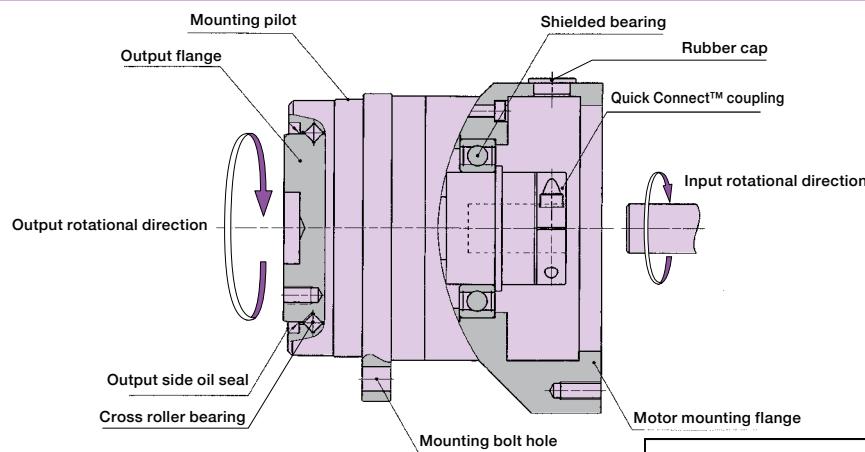

## Rating Table

Size	Ratio	Table 019-1							
		Rated Torque <sup>*1</sup>		Limit for Repeated Peak Torque <sup>*2</sup>		Max. Average Input Speed <sup>*4</sup>		Mass <sup>*6</sup>	
		Nm	Nm	Nm	rpm	rpm	kg	kg	
11	5	6.6	12	13	20	3000	10000	0.18	0.14
	21	10						0.24	0.20
	37	12							
	45	13							
14	5	15	39	39	56	3000	6000	0.54	0.42
	11	20	38					0.63	0.51
	15	21							
	21	23							
	33	27							
20	45	29			217	3000	6000	1.6	1.2
	5	50	133					1.9	1.5
	11	59	156						
	15	70							
	21	78						2.0	1.6
	33	72	156						
32	45	98	142		650	3000	6000	1.9	1.5
	5	150	400					4.4	3.0
	11	160	440					5.1	3.7
	15	220							
	21	240							
	33	200	440						
50	45	280	400		1850	2000	4500	5.4	4.0
	5	380						5.1	3.7
	11	450							
	15	460	1500						
	21	490						13	10
	33	620							
65	45	640	1360		2180	4500	3000	15	12
	4	1150	3520					2500	32 <sup>7</sup>
	5	1190							
	12	1350							
	15	1670	3940					3000	22
	20	1520	3790						
	25	1900	3840						

\*1: Rated torque is based on L<sub>50</sub> life of 20,000 hours at max average input speed.

\*2: The limit for torque during start and stop cycles.

\*3: The limit for torque during emergency stops or from external shock loads. Always operate below this value. Calculate the number of permissible events to ensure it meets required operating conditions.

\*4: Maximum average input speed is limited by heat generation in the speed reducer assuming a continuous operating speed or the average input speed of a motion profile. The actual limit for average input speed depends on the operating environment.

\*5: Maximum instantaneous input speed.

\*6: The mass is for the gearhead only (without input shaft coupling & motor flange). Please contact us for the mass of your specific configuration.

\*7: Flange output is standard for the size 65 gearhead. Shaft type (J2 & J6) is also available.



(877) 737-8698

[sales@electromate.com](mailto:sales@electromate.com)

[www.electromate.com](http://www.electromate.com)

## Performance Table

Table 020-1

Size	Ratio	Accuracy *1		Repeatability *2		Starting torque *3		Backdriving torque *4		No-load running torque *5	
		arc min	x10 <sup>-4</sup> rad	arc sec		Ncm	kgfcm	Nm	kgfm	Ncm	kgfcm
11	5	5	14.5	$\pm 30$		4.0	0.41	0.20	0.020	5.0	0.51
	21					2.9	0.29	0.60	0.061	1.3	0.13
	37					1.6	0.17		0.062	0.90	0.092
	45					1.4	0.15	0.64	0.066	0.80	0.082
14	5	4	11.6	$\pm 20$		8.6	0.88	0.43	0.044	9.8	1.0
	11					8.0	0.82	0.90	0.092	4.9	0.50
	15					7.4	0.75		0.11		
	21					5.2	0.53			2.9	0.30
	33					3.3	0.34		0.12		
	45					2.4	0.25			2.0	0.20
20	5	4	11.6	$\pm 15$		19	1.9	0.93	0.095	28	2.9
	11					15	1.6	1.7	0.17	15	1.5
	15					12	1.2	1.8	0.18	11	1.1
	21					9.3	0.95	2.0	0.20	8.8	0.90
	33					6.4	0.65			5.9	0.60
	45					4.7	0.48			4.9	0.50
32	5	4	11.6	$\pm 15$		33	3.4	1.7	0.17	73	7.4
	11					27	2.7	2.9	0.30	38	3.9
	15					25	2.5	3.7	0.38	29	3.0
	21					22	2.3	4.7	0.48	24	2.4
	33					15	1.5	4.8	0.49	14	1.4
	45					11	1.2	5.1	0.52	13	1.3
50	5	3	8.7	$\pm 15$		80	8.2	4.0	0.41	130	13
	11					45	4.6	5.0	0.51	60	6.1
	15					40	4.1	6.0	0.61	47	4.8
	21					36	3.7	7.6	0.78	40	4.1
	33					24	2.4	7.8	0.80	24	2.5
	45					20	2.0	8.9	0.91	20	2.0
65	4	3	8.7	$\pm 15$		288	29		12	420	43
	5					240	24			360	37
	12					125	13	15	1.5	190	19
	15					110	11	17	1.7	160	16
	20					95	10	19	1.9	130	13
	25					84	8.6	21	2.1	110	11

\*1: Accuracy values represent the difference between the theoretical angle and the actual angle of output for any given input. The values shown in the table are maximum values.

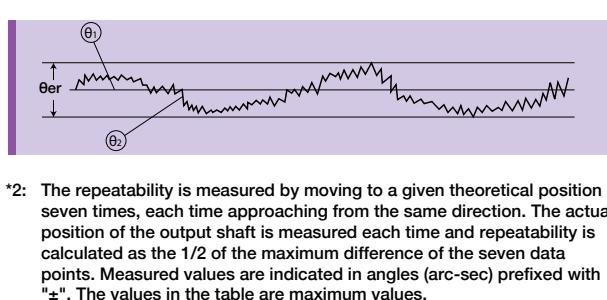


Figure 020-1

θer : Accuracy

θ1 : Input angle

θ2 : Actual output angle

R : Gear reduction ratio

$$\theta_{er} = \theta_2 - \frac{\theta_1}{R}$$

\*2: The repeatability is measured by moving to a given theoretical position seven times, each time approaching from the same direction. The actual position of the output shaft is measured each time and repeatability is calculated as the 1/2 of the maximum difference of the seven data points. Measured values are indicated in angles (arc-sec) prefixed with "±". The values in the table are maximum values.

\*3: Starting torque is the torque value applied to the input side at which the output first starts to rotate. The values in the table are maximum values.

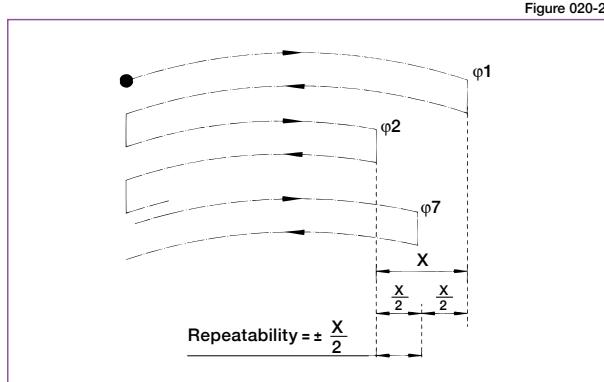


Figure 020-2

\*4: Backdriving torque is the torque value applied to the output side at which the input first starts to rotate. The values in the table are maximum values.

Note: Never rely on these values as a margin in a system that must hold an external load. A brake must be used where back driving is not permissible.

Load	No load
HPGP speed reducer surface temperature	25°C

Table 020-2

\*5: No-load running torque is the torque required at the input to operate the gearhead at a given speed under a no-load condition. The values in the table are average values.

Input speed	3000 rpm
Load	No load
HPGP speed reducer surface temperature	25°C

Table 020-3



# Backlash and Torsional Stiffness

## Gearhead - Standard backlash (BL3) (≤ 3 arc-min)

Size	Ratio	Backlash		Torsion angle on one side at TR <sub>x</sub> 0.15 D		Torsional stiffness A/B Nm/arc.min. x100Nm/rad
		arc min	x10 <sup>-4</sup> rad	arc min	x10 <sup>-4</sup> rad	
11	5	3.0	8.7	2.5	7.3	.637
	21			3.0	8.7	
	37					
	45					
14	5	3.0	8.7	2.2	6.4	1.372
	11					
	15			2.7	7.9	
	21					
	33					
	45					
20	5	3.0	8.7	1.5	4.4	5.39
	11					
	15			2.0	5.8	
	21					
	33					
	45					
32	5	3.0	8.7	1.3	3.8	21.56
	11					
	15			1.7	4.9	
	21					
	33					
	45					
50	5	3.0	8.7	1.3	3.8	137.2
	11					
	15			1.7	4.9	
	21					
	33					
	45					
65	4	3.0	8.7	1.3	3.8	372.4
	5					
	12			1.7	4.9	
	15					
	20					
	25					

## Gearhead - Reduced backlash (BL1) (≤ 1 arc-min)

Size	Ratio	Backlash		Torsion angle on one side at TR <sub>x</sub> 0.15 D		Torsional stiffness A/B Nm/arc.min. x100Nm/rad
		arc min	x10 <sup>-4</sup> rad	arc min	x10 <sup>-4</sup> rad	
11						not available
14	5					
	11					
	15					
	21					
	33					
	45					
20	5					
	11					
	15					
	21					
	33					
	45					
32	5					
	11					
	15					
	21					
	33					
	45					
50	5					
	11					
	15					
	21					
	33					
	45					
65	4					
	5					
	12					
	15					
	20					
	25					

### Torsional stiffness curve

With the input of the gear locked in place, a torque applied to the output flange will torsionally deflect in proportion to the applied torque. We generate a torsional stiffness curve by slowly applying torque to the output in the following sequence:

- (1) Clockwise torque to TR, (2) Return to Zero, (3) Counter-Clockwise torque to -TR, (4) Return to Zero and (5) again Clockwise torque to TR.

A loop of (1) > (2) > (3) > (4) > (5) will be drawn as in Fig. 021-1. The torsional stiffness in the region from "0.15 x TR" to "TR" is calculated using the average value of this slope. The torsional stiffness in the region from "zero torque" to "0.15 x TR" is lower. This is caused by the small amount of backlash plus engagement of the mating parts and loading of the planet gears under the initial torque applied.

### Calculation of total torsion angle

The method to calculate the total torsion angle (average value) on one side when the speed reducer applies a load in a no-load state.

Formula 021-1

#### ● Calculation formula

$$\theta = D + \frac{T - T_L}{A/B}$$


$\theta$	Total torsion angle
D	Torsion angle on one side at output torque x 0.15 torque
T	Load torque
$T_L$	Output torque x 0.15 torque
	See Fig. 021-1 (=TRx0.15) See Fig. 021-1, Table 021-1 to 2
A/B	Torsional stiffness

### Backlash (Hysteresis loss)

The vertical distance between points (2) & (4) in Fig. 021-1 is called a hysteresis loss. The hysteresis loss between "Clockwise load torque TR" and "Counter Clockwise load torque - TR" is defined as the backlash of the HPGP series. Backlash of the HPGP series is less than 3 arc-min (1 arc-min is also available).

Torque-torsion angle diagram

Figure 021-1

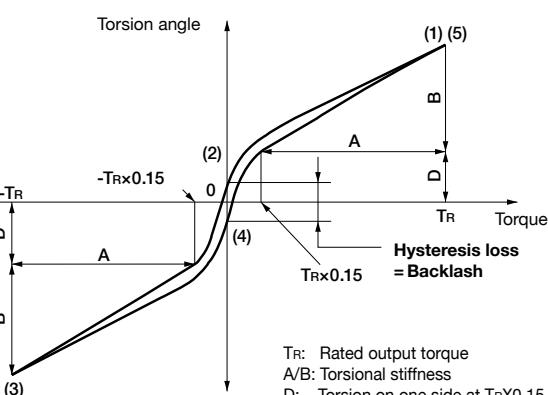

(877) 737-8698

sales@electromate.com


www.electromate.com

HarmonicPlanetary® &amp; HarmonicDrive® Gearheads

## HPGP-11 Outline Dimensions

Only primary dimensions are shown in the drawings below. Refer to the confirmation drawing for detailed dimensions.

Figure 022-1

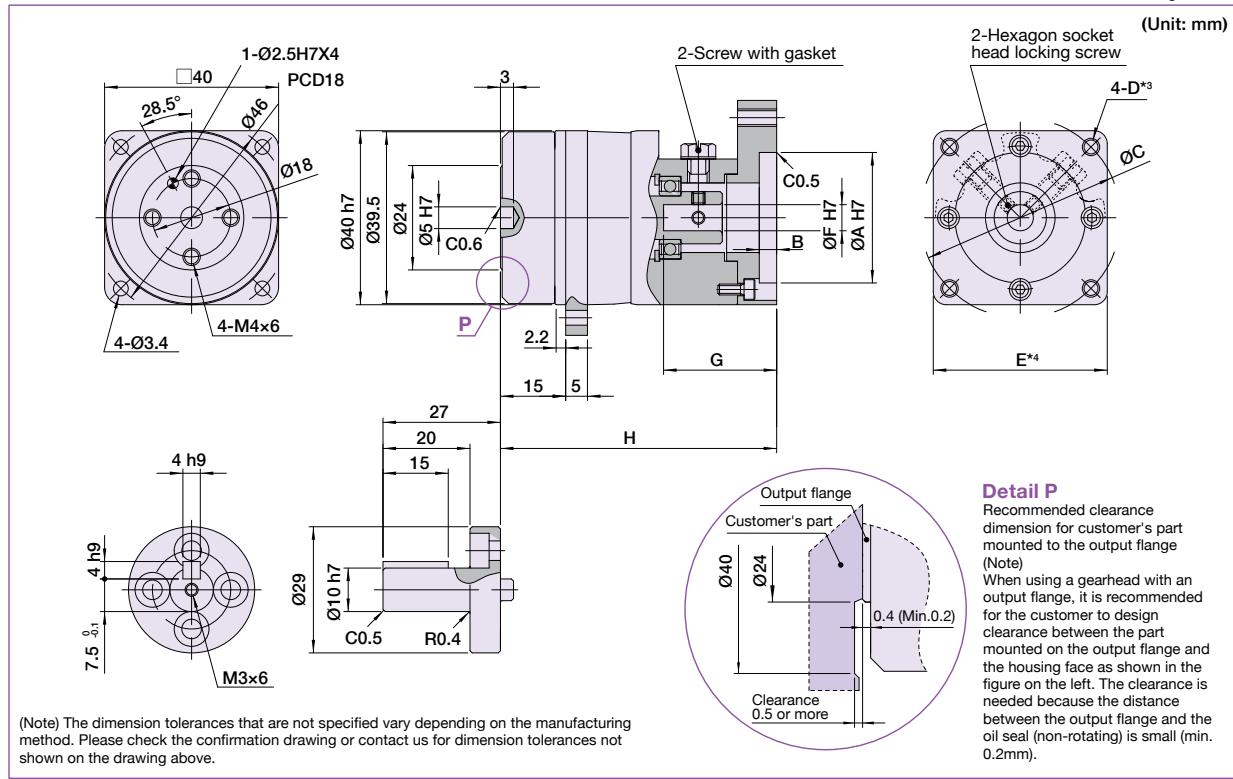

## Dimension Table

(Unit: mm) Table 022-1

	Flange	Coupling	A (H7)		B	C		F (H7)		G		H *1	Mass (kg) *2
			Min.	Max.		Max.	Min.	Max.	Min.	Max.	Typical		
Single Stage	Type I	1	20	50	4	28	70	5	8	17.5	26	54.5	0.34
Two Stage	Type I	1	20	50	4	28	70	5	8	17.5	26	63.5	0.40

Refer to the confirmation drawing for detailed dimensions. Dimensions of typical products are shown. Please contact us for other mounting options if the configurations shown above are not suitable for your particular motor.

\*1 May vary depending on motor interface dimensions.

\*2 The mass will vary slightly depending on the ratio and on the inside diameter of the input shaft coupling.

\*3 Tapped hole for motor mounting screw.

\*4 E dimension is dependent on motor selection.

## Moment of Inertia


(10<sup>-4</sup> kgm<sup>2</sup>) Table 022-2

HPGP 11	Coupling	Ratio	5	21	37	45
		1	0.006	0.004	0.0027	0.0025

## HPGP-14 Outline Dimensions

Only primary dimensions are shown in the drawings below. Refer to the confirmation drawing for detailed dimensions.

Figure 023-1

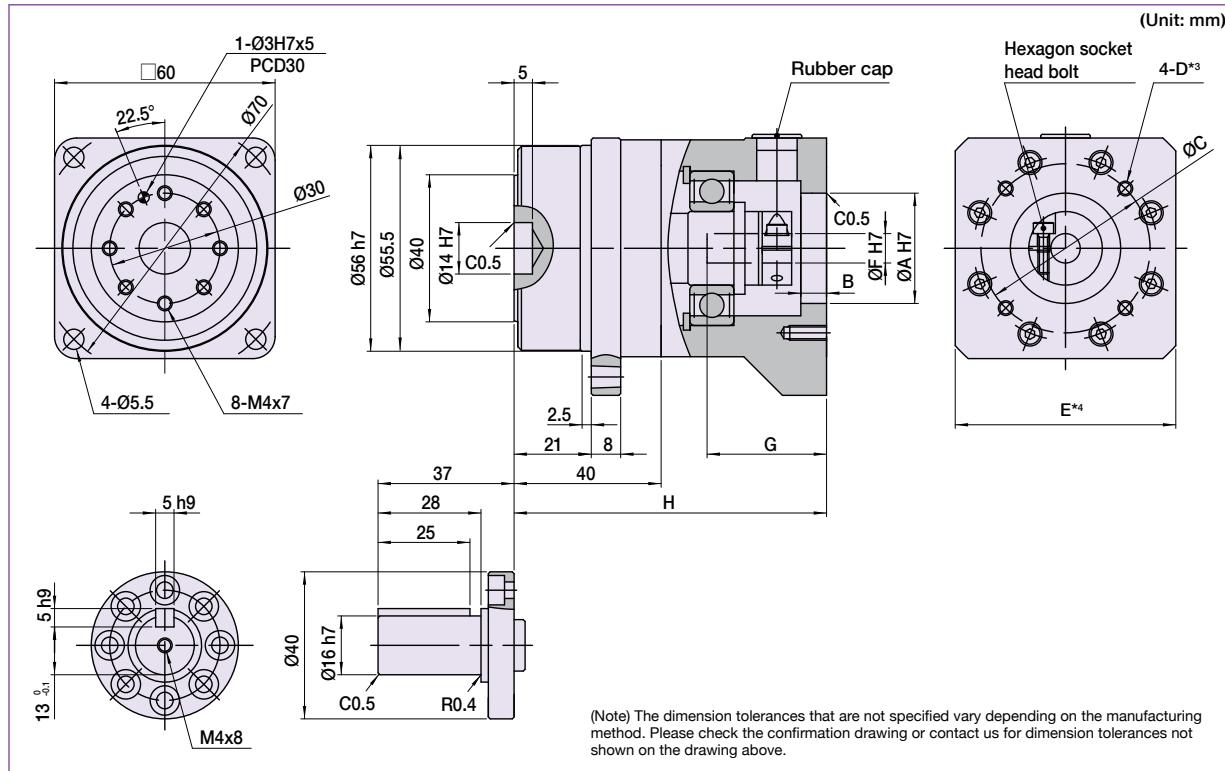

## Dimension Table

(Unit: mm) Table 023-1

Flange	Coupling	A (H7)		B	C		F (H7)		G		H *1	Mass (kg) *2	
		Min.	Max.		Max.	Min.	Max.	Min.	Max.	Min.	Max.	Shaft	Flange
Type I	1	30	58	7	35	74	6.0	7.8	21.5	32.5	85	1.07	0.95
Type II	1	40	70	7	45	84	9.0	14.2	25.8	33.8	85	1.12	1.00

Refer to the confirmation drawing for detailed dimensions. Dimensions of typical products are shown. Please contact us for other mounting options if the configurations shown above are not suitable for your particular motor.

\*1 May vary depending on motor interface dimensions.

\*2 The mass will vary slightly depending on the ratio and on the inside diameter of the input shaft coupling.

\*3 Tapped hole for motor mounting screw.

\*4 E dimension is dependent on motor selection.

## Moment of Inertia

(10<sup>-4</sup> kgm<sup>2</sup>) Table 023-2


HPGP 14	Ratio Coupling	5	11	15	21	33	45
		-	0.06	0.058	0.05	0.044	0.044
	2	0.204	0.197	0.195	-	-	-



## HPGP-20 Outline Dimensions

Only primary dimensions are shown in the drawings below. Refer to the confirmation drawing for detailed dimensions.

Figure 024-1

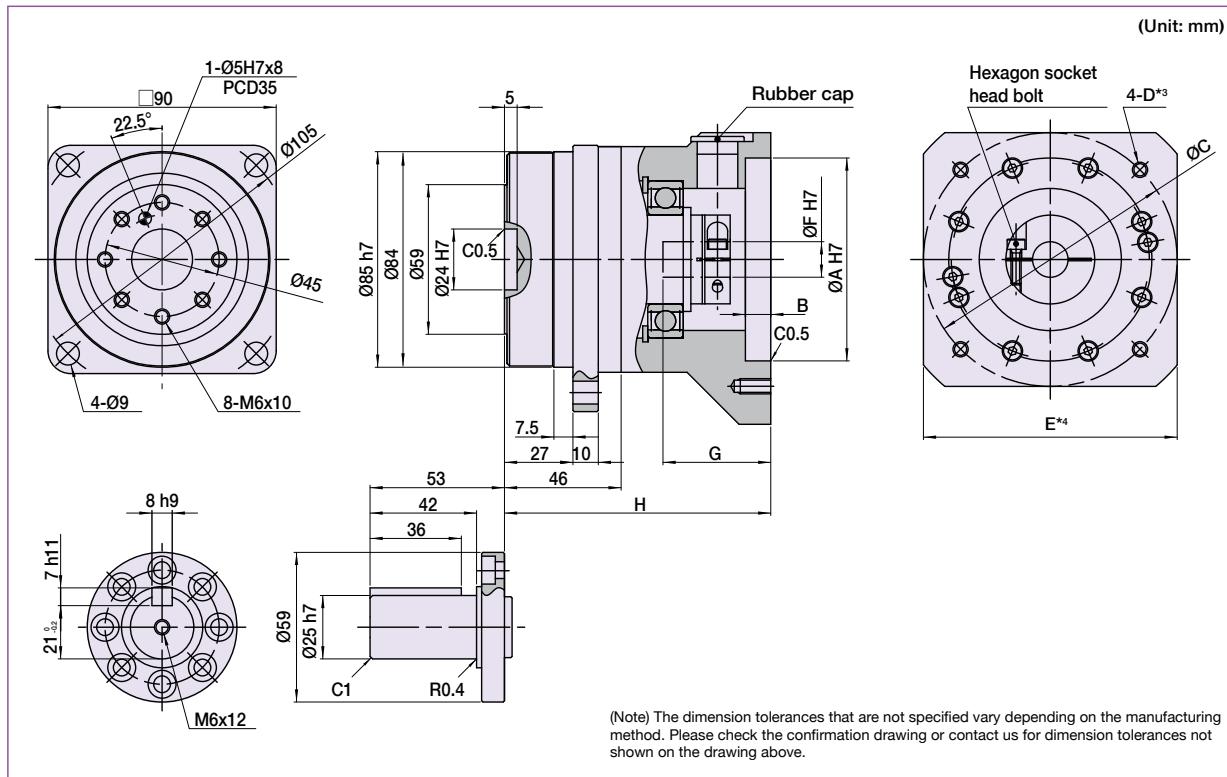

## Dimension Table

(Unit: mm) Table 024-1

Flange	Coupling	A (H7)		B	C		F (H7)		G		H *1	Mass (kg) *2		
		Min.	Max.		Min.	Max.	Min.	Max.	Min.	Max.		Typical	Shaft	
Type I	1	50	72	8	55	80	7.0	19.6	23.0	35.5	98.0	3.1	2.7	
Type II	1	80	98	10	90	120	7.0	19.6	30.0	42.5	105.0	3.3	2.9	
Type III	3	30	45	10	35	50	7.0	7.8	21.0	31.0	93.5	2.6	2.2	
Type IV	1	46	70	10	55	96	7.0	19.6	30.0	42.5	105.0	3.3	2.9	
-33 Ratio	Type I	1	50	72	8	55	80	7.0	19.6	23.0	35.5	103.0	3.1	2.7
	Type II	1	80	98	10	90	120	7.0	19.6	30.0	42.5	110.0	3.3	2.9
	Type III	3	30	45	10	35	50	7.0	7.8	21.0	31.0	98.5	2.6	2.2
	Type IV	1	46	70	10	55	96	7.0	19.6	30.0	42.5	103.0	3.3	2.9

Refer to the confirmation drawing for detailed dimensions. Dimensions of typical products are shown. Please contact us for other mounting options if the configurations shown above are not suitable for your particular motor.

\*1 May vary depending on motor interface dimensions.

\*2 The mass will vary slightly depending on the ratio and on the inside diameter of the input shaft coupling.

\*3 Tapped hole for motor mounting screw.

\*4 E dimension is dependent on motor selection.

## Moment of Inertia


(10<sup>-4</sup> kgm<sup>2</sup>) Table 024-2

HPGP 20	Ratio Coupling	5	11	15	21	33	45
		1	0.69	0.62	0.58	0.5	0.45
	2	-	-	-	0.12	0.071	0.063



## HPGP-32 Outline Dimensions

Only primary dimensions are shown in the drawings below. Refer to the confirmation drawing for detailed dimensions.

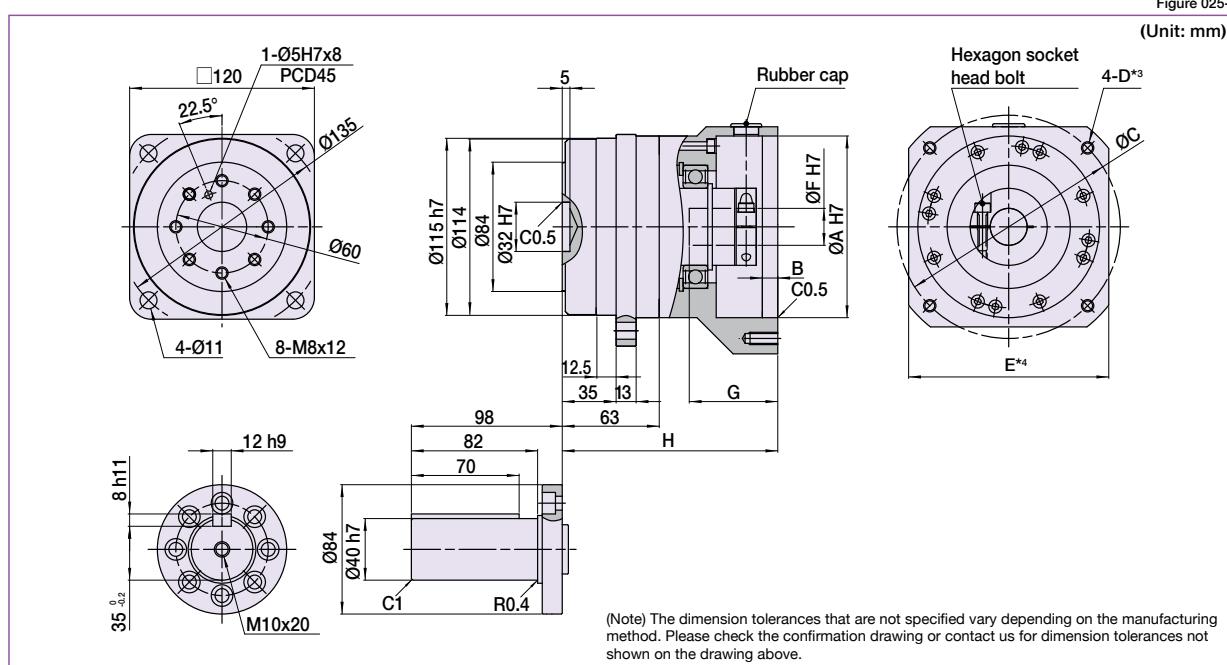

## Dimension Table

(Unit: mm) Table 025-1

Flange	Coupling	A (H7)		B		C		F (H7)		G		H *1	Mass (kg) *2	
		Min.	Max.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Typical	Shaft	Flange	
Type I	1	110	120	10	120	155	10.0	28.6	31.0	57.5	140	3.1	2.7	
Type II	1	70	100	7	80	112	10.0	28.6	30.0	56.5	139	3.3	2.9	
Type III	3	50	100	10	80	112	14.0	19.6	25.8	38.8	139	2.6	2.2	
Type IV	1	70	95	10	80	115	10.0	28.6	41.0	67.5	150	3.3	2.9	
Type V	1	70	110	10	80	155	10.0	28.6	45.0	71.5	154	3.3	2.9	
-33 Ratio	Type I	110	120	10	120	155	10.0	28.6	31.0	57.5	145	3.1	2.7	
	Type II	70	100	7	80	112	10.0	28.6	30.0	56.5	144	3.3	2.9	
	Type III	50	100	10	80	112	14.0	19.6	25.8	38.8	144	2.6	2.2	
	Type IV	70	95	10	80	115	10.0	28.6	41.0	67.5	155	3.3	2.9	
	Type V	70	110	10	80	155	10.0	28.6	45.0	71.5	159	3.3	2.9	

Refer to the confirmation drawing for detailed dimensions. Dimensions of typical products are shown. Please contact us for other mounting options if the configurations shown above are not suitable for your particular motor.

\*1 May vary depending on motor interface dimensions.

\*2 The mass will vary slightly depending on the ratio and on the inside diameter of the input shaft coupling.

\*3 Tapped hole for motor mounting screw.

\*4 E dimension is dependent on motor selection.

## Moment of Inertia

(10<sup>-4</sup> kgm<sup>2</sup>) Table 025-2


HPGP 32	Ratio Coupling	5	11	15	21	33	45
		1	3.9	3.7	3.5	3	2.8
	2	-	-	-	0.84	0.66	0.61

## HPGP-50 Outline Dimensions

Only primary dimensions are shown in the drawings below. Refer to the confirmation drawing for detailed dimensions.

Figure 026-1

(Unit: mm)

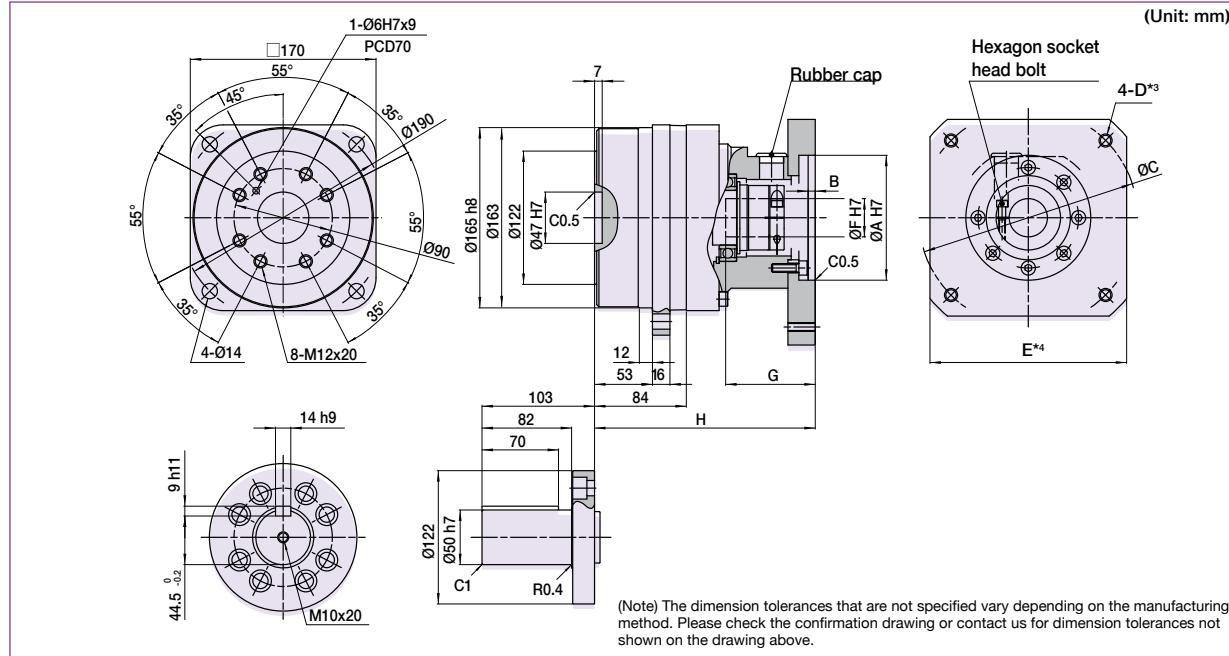

(Note) The dimension tolerances that are not specified vary depending on the manufacturing method. Please check the confirmation drawing or contact us for dimension tolerances not shown on the drawing above.

## Dimension Table

(Unit: mm) Table 026-1

Flange	Coupling	A (H7)		B	C		F (H7)		G		H *1	Mass (kg) *2	
		Min.	Max.		Min.	Max.	Min.	Max.	Min.	Max.		Typical	Shaft
Type I	1	70	200	15	90	235	19.0	41.0	45.0	81.0	202	20.2	17.2
Type II	1	70	200	15	90	235	19.0	41.0	45.0	81.0	243.5	20.4	17.4
Type III	2	80	115	10	100	150	19.0	41.0	31.5	55.0	176	19.0	16.0
Type IV	1	70	200	15	90	235	19.0	41.0	45.0	81.0	202	27.5	24.5

Refer to the confirmation drawing for detailed dimensions. Dimensions of typical products are shown. Please contact us for other mounting options if the configurations shown above are not suitable for your particular motor.

\*1 May vary depending on motor interface dimensions.

\*2 The mass will vary slightly depending on the ratio and on the inside diameter of the input shaft coupling.

\*3 Tapped hole for motor mounting screw.

\*4 E dimension for Flange Type I, II, and IV is dependent on motor selection.

## Moment of Inertia

(10<sup>-4</sup> kgm<sup>2</sup>) Table 026-2


HPGP 50	Ratio Coupling	5	11	15	21	33	45
		1	12	9.4	9.1	7	6.1
	2	-	-	8.3	5.8	4.9	4.7

## HPGP-65 Outline Dimensions

Only primary dimensions are shown in the drawings below. Refer to the confirmation drawing for detailed dimensions.

Figure 027-1

(Unit: mm)

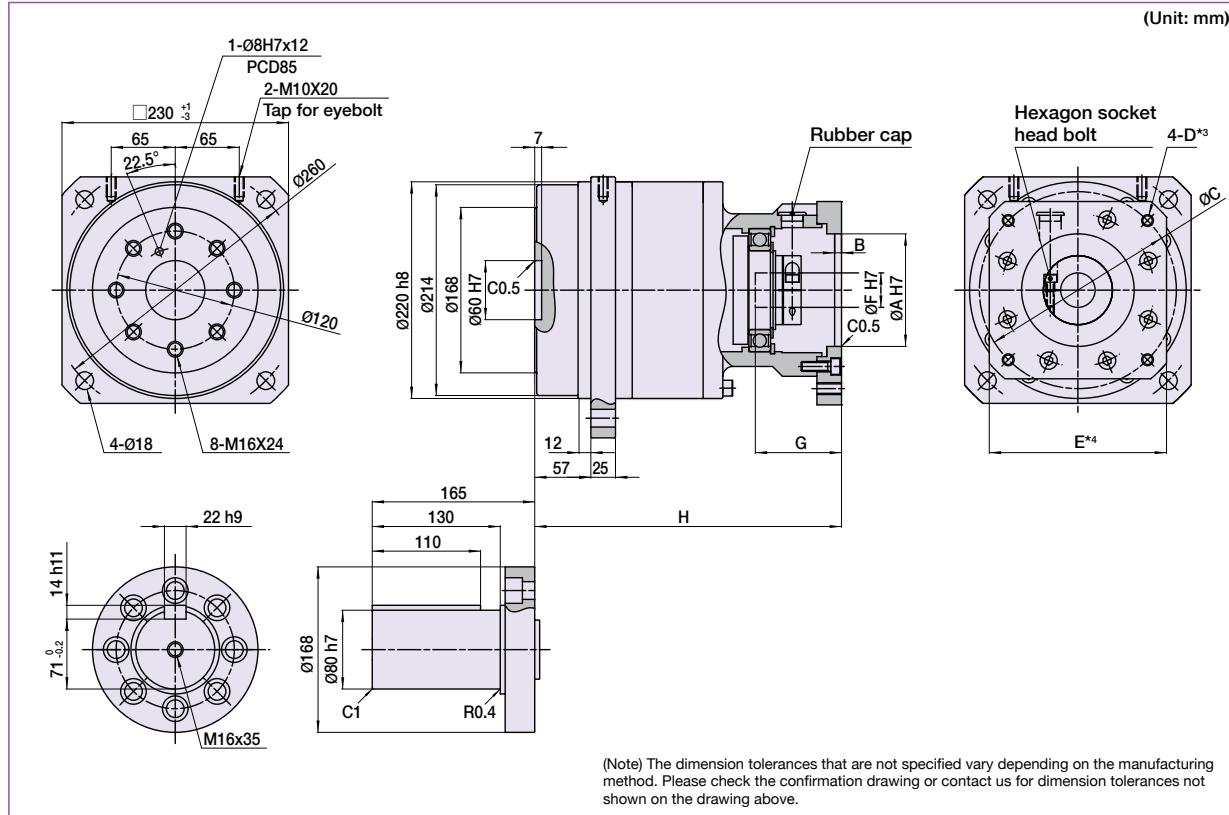

## Dimension Table

(Unit: mm) Table 027-1

	Flange	Coupling	A (H7)		B	C		F (H7)		G		H *1	Mass (kg) *2	
			Min.	Max.		Min.	Max.	Min.	Max.	Min.	Max.	Typical	Shaft	Flange
Single Stage	Type I	1	125	230	15	150	265	35.0	43.9	63.0	87.5	241.5	48.0	38.0
Two Stage	Type I	1	125	230	15	150	265	35.0	43.9	63.0	87.5	311.5	52.0	42.0

Refer to the confirmation drawing for detailed dimensions. Dimensions of typical products are shown. Please contact us for other mounting options if the configurations shown above are not suitable for your particular motor.

\*1 May vary depending on motor interface dimensions.

\*2 The mass will vary slightly depending on the ratio and on the inside diameter of the input shaft coupling.

\*3 Tapped hole for motor mounting screw.

\*4 E dimension is dependent on motor selection.

## Moment of Inertia

(10<sup>-4</sup> kgm<sup>2</sup>) Table 027-2

HPGP 65	Coupling	Ratio	4	5	12	15	20	25
		1	-	-	28	27	15	15
		2	92	-	77	69	57	56

## Product Sizing & Selection


To fully utilize the excellent performance of the HPGP HarmonicPlanetary® gearheads, check your operating conditions and, using the flowchart, select the appropriate size gear for your application.

In general, a servo system rarely operates at a continuous load and speed. The input speed, load torque change and a comparatively large torque is applied during start and stop. Unexpected impact torques may also be applied.

Check your operating conditions against the following load torque pattern and select a suitable size based on the flowchart shown on the right. Also check the life and static safety coefficient of the cross roller bearing and input side main bearing (input shaft type only).

### Checking the load torque pattern

Review the load torque pattern. Check the specifications shown in the figure below.

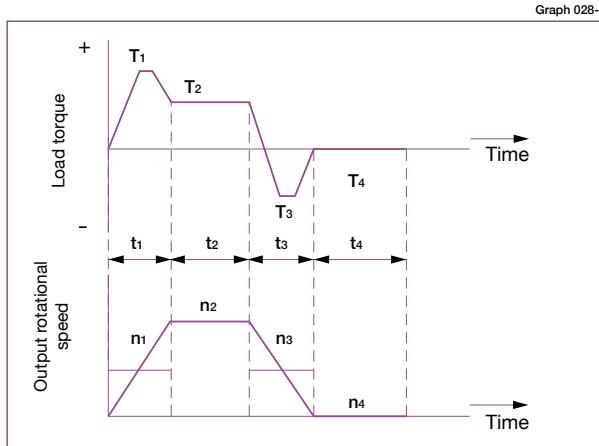

#### Obtain the value of each load torque pattern.

Load torque	T <sub>1</sub> to T <sub>n</sub> (Nm)
Time	t <sub>1</sub> to t <sub>n</sub> (sec)
Output rotational speed	n <sub>1</sub> to n <sub>n</sub> (rpm)

#### <Normal operation pattern>

Starting	T <sub>1</sub> , t <sub>1</sub> , n <sub>1</sub>
Steady operation	T <sub>2</sub> , t <sub>2</sub> , n <sub>2</sub>
Stopping (slowing)	T <sub>3</sub> , t <sub>3</sub> , n <sub>3</sub>
Idle	T <sub>4</sub> , t <sub>4</sub> , n <sub>4</sub>

#### <Maximum rotational speed>

Max. output rotational speed	n <sub>o max</sub> ≥ n <sub>1</sub> to n <sub>n</sub>
Max. input rotational speed	n <sub>i max</sub> n <sub>1</sub> × R to n <sub>n</sub> × R
(Restricted by motors)	R: Reduction ratio

#### <Impact torque>

When impact torque is applied T<sub>s</sub>

#### <Required life>

L<sub>50</sub> = L (hours)

### Flowchart for selecting a size

Please use the flowchart shown below for selecting a size. Operating conditions must not exceed the performance ratings.

Calculate the average load torque applied on the output side from the load torque pattern: T<sub>av</sub> (Nm).

$$T_{av} = \frac{1^{0.3} (|n_1| \cdot t_1 \cdot |T_1|)^{0.3} + |n_2| \cdot t_2 \cdot |T_2|^{0.3} + \dots + |n_n| \cdot t_n \cdot |T_n|^{0.3}}{n_1 \cdot t_1 + n_2 \cdot t_2 + \dots + n_n \cdot t_n}$$

Calculate the average output speed based on the load torque pattern: no av (rpm)

$$no\ av = \frac{|n_1| \cdot t_1 + |n_2| \cdot t_2 + \dots + |n_n| \cdot t_n}{t_1 + t_2 + \dots + t_n}$$

Make a preliminary model selection with the following condition: T<sub>av</sub> ≤ Average load torque (Refer to rating table).

Determine the reduction ratio (R) based on the maximum output rotational speed (no max) and maximum input rotational speed (n<sub>i max</sub>).

$$\frac{n_{i\ max}}{no\ max} \geq R$$

(A limit is placed on n<sub>i max</sub> by motors.) Calculate the maximum input speed (n<sub>i max</sub>) from the maximum output speed (no max) and the reduction ratio (R).  
n<sub>i max</sub> = no max × R

Calculate the average input speed (n<sub>i av</sub>) from the average output speed (no av) and the reduction ratio (R): n<sub>i av</sub> = no av · R ≤ Max. average input speed (nr).

Check whether the maximum input speed is equal to or less than the values in the rating table.  
n<sub>i max</sub> ≤ maximum input speed (rpm)

Check whether T<sub>1</sub> and T<sub>3</sub> are within peak torques (Nm) on start and stop in the rating table.

Check whether T<sub>s</sub> is equal to or less than the momentary max. torque (Nm) value from the ratings.

Calculate the lifetime and check whether it meets the specification requirement.

Tr: Output torque  
n<sub>r</sub>: Max. average input speed  
 $L_{50} = 20,000 \cdot \left( \frac{T_r}{T_{av}} \right)^{10/3} \cdot \left( \frac{n_r}{n_{i\ av}} \right)$  (Hour)

The model number is confirmed.

#### Caution

If the expected operation will result in conditions where:  
i) Actual average load torque (T<sub>av</sub>) > Permissible maximum value of average load torque or  
ii) Actual average input rotational speed (n<sub>i av</sub>) > Permissible average input rotational speed (n<sub>r</sub>), then please check its effect on the speed reducer temperature rise or other factors. Consider selecting the next larger speed reducer, change the operating loads or take other means to ensure safe use of the gear. Exercise caution especially when the duty cycle is close to continuous operation.

Refer to the Caution note below.

Review the operation conditions, size and reduction ratio.

## Example of model number Selection

## Value of each load torque pattern.

Load torque  $T_n$  (Nm)  
 Time  $t_n$  (sec)  
 Output rotational speed  $n_n$  (rpm)

## &lt;Normal operation pattern&gt;

Starting  $T_1 = 70 \text{ Nm}$ ,  $t_1 = 0.3 \text{ sec}$ ,  $n_1 = 60 \text{ rpm}$   
 Steady operation  $T_2 = 18 \text{ Nm}$ ,  $t_2 = 3 \text{ sec}$ ,  $n_2 = 120 \text{ rpm}$   
 Stopping (slowing)  $T_3 = 35 \text{ Nm}$ ,  $t_3 = 0.4 \text{ sec}$ ,  $n_3 = 60 \text{ rpm}$   
 Idle  $T_4 = 0 \text{ Nm}$ ,  $t_4 = 5 \text{ sec}$ ,  $n_4 = 0 \text{ rpm}$

<Maximum rotational speed>  
 Max. output rotational speed  $n_{max} = 120 \text{ rpm}$   
 Max. input rotational speed  $n_{i max} = 5,000 \text{ rpm}$   
 (Restricted by motors)

<Impact torque>  
 When impact torque is applied  $T_s = 180 \text{ Nm}$

<Required life>  
 $L_{50} = 30,000 \text{ (hours)}$

Calculate the average load torque applied to the output side based on the load torque pattern:  $T_{av}$  (Nm).

$$T_{av} = \sqrt[10/3]{\frac{|60\text{rpm}| \cdot 0.3\text{sec} \cdot |70\text{Nm}|^{10/3} + |120\text{rpm}| \cdot 3\text{sec} \cdot |18\text{Nm}|^{10/3} + |60\text{rpm}| \cdot 0.4\text{sec} \cdot |35\text{Nm}|^{10/3}}{|60\text{rpm}| \cdot 0.3\text{sec} + 120\text{rpm} \cdot 3\text{sec} + |60\text{rpm}| \cdot 0.4\text{sec}|}}$$

Calculate the average output speed based on the load torque pattern: no  $av$  (rpm)

$$\text{no } av = \frac{|60\text{rpm}| \cdot 0.3\text{sec} + |120\text{rpm}| \cdot 3\text{sec} + |60\text{rpm}| \cdot 0.4\text{sec} + |0\text{rpm}| \cdot 5\text{sec}}{0.3\text{sec} + 3\text{sec} + 0.4\text{sec} + 5\text{sec}}$$

Make a preliminary model selection with the following conditions.  $T_{av} = 30.2 \text{ Nm} \leq 72 \text{ Nm}$ . (HPGP-20A-33 is tentatively selected based on the average load torque (see the rating table) of size 20 and reduction ratio of 33.)



Refer to the Caution note at the bottom of page 28.



Determine a reduction ratio ( $R$ ) from the maximum output speed (no  $max$ ) and maximum input speed ( $n_{i max}$ ).

$$\frac{5,000 \text{ rpm}}{120 \text{ rpm}} = 41.7 \geq 33$$

Calculate the maximum input speed ( $n_{i max}$ ) from the maximum output speed (no  $max$ ) and reduction ratio ( $R$ ):  $n_{i max} = 120 \text{ rpm} \cdot 33 = 3,960 \text{ rpm}$



Calculate the average input speed ( $n_{i av}$ ) from the average output speed (no  $av$ ) and reduction ratio ( $R$ ):  
 $n_{i av} = 46.2 \text{ rpm} \cdot 33 = 1,525 \text{ rpm} \leq \text{Max average input speed of size 20 } 3,000 \text{ rpm}$



Check whether the maximum input speed is equal to or less than the values specified in the rating table.  
 $n_{i max} = 3,960 \text{ rpm} \leq 5,000 \text{ rpm}$  (maximum input speed of size 20)



Check whether  $T_1$  and  $T_3$  are within peak torques (Nm) on start and stop in the rating table.  
 $T_1 = 70 \text{ Nm} \leq 156 \text{ Nm}$  (Limit for repeated peak torque, size 20)  
 $T_3 = 35 \text{ Nm} \leq 156 \text{ Nm}$  (Limit for repeated peak torque, size 20)



Check whether  $T_s$  is equal to or less than limit for momentary torque (Nm) in the rating table.  
 $T_s = 180 \text{ Nm} \leq 217 \text{ Nm}$  (momentary max. torque of size 20)



Calculate life and check whether the calculated life meets the requirement.

$$L_{50} = 20,000 \cdot \left( \frac{72 \text{ Nm}}{30.2 \text{ Nm}} \right)^{10/3} \cdot \left( \frac{3,000 \text{ rpm}}{1,525 \text{ rpm}} \right) = 712,251 \text{ (hours)} \geq 30,000 \text{ (hours)}$$



The selection of model number HPGP-20A-33 is confirmed from the above calculations.


Review the operation conditions, size and reduction ratio.

# HarmonicPlanetary® HPGP / HPG Series

The thin wall flexible gear technology used for HarmonicDrive® gearing is applied to the internal gear of our planetary gear speed reducers. It allows the internal gear to deform elastically thus maintaining low backlash for the life of the gearhead, without the need for adjustment.


Planetary gears have simultaneous meshing between the sun gear and planet gears and between the planet gears and the internal gear. Some manufacturers try to reduce the backlash by controlling the dimensional precision of the parts, however this causes interference of meshing parts due to dimensional errors, resulting in uneven input torque and noise. Harmonic Planetary gears use a thin wall elastic internal gear which allows a preload of the gear and compensates for interference between meshing parts. The Harmonic Planetary® gear series incorporates this internal gear which maintains low backlash for the life of the speed reducer.

- ◆ **Low backlash: Less than 3 arc-min (Less than 1 arc-min also available)**
- ◆ **Low gear ratios, 3:1 to 50:1**
- ◆ **High efficiency**
- ◆ **High load capacity by integrating structure with cross roller bearing**
- ◆ **High-torque capacity**

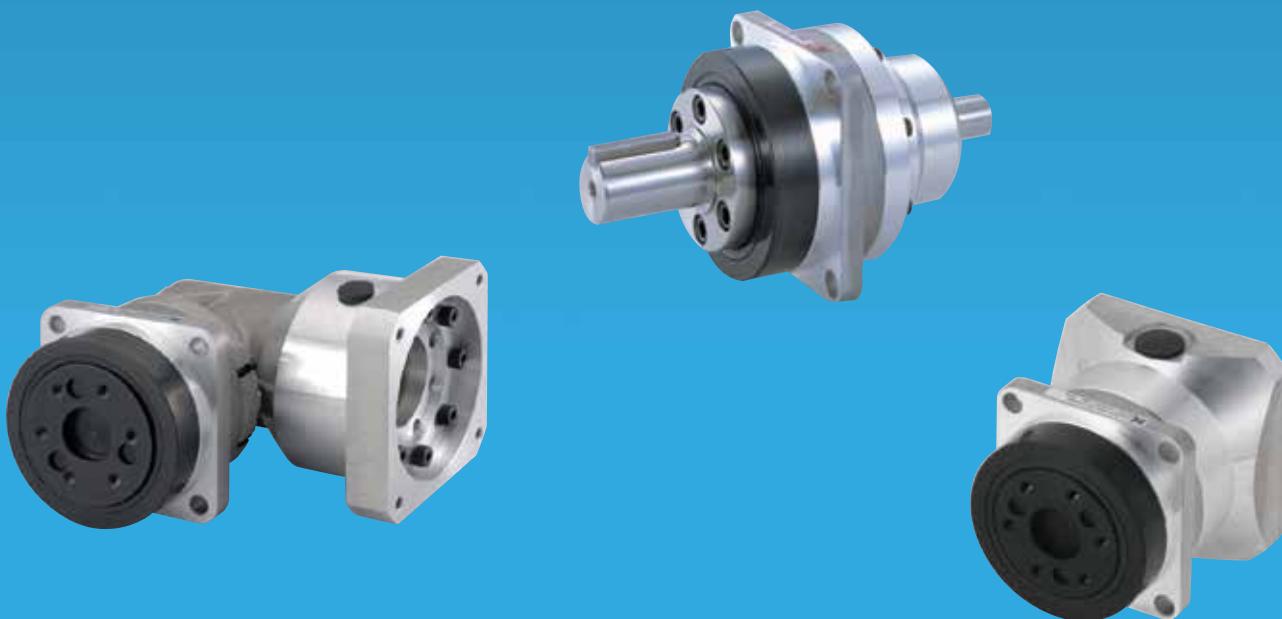

**Robust cross roller bearing and output flange are integrated to provide high moment stiffness, high load capacity and precise positioning accuracy.**

The cross roller bearing output flange serves as the second stage carrier for a rugged, compact design.

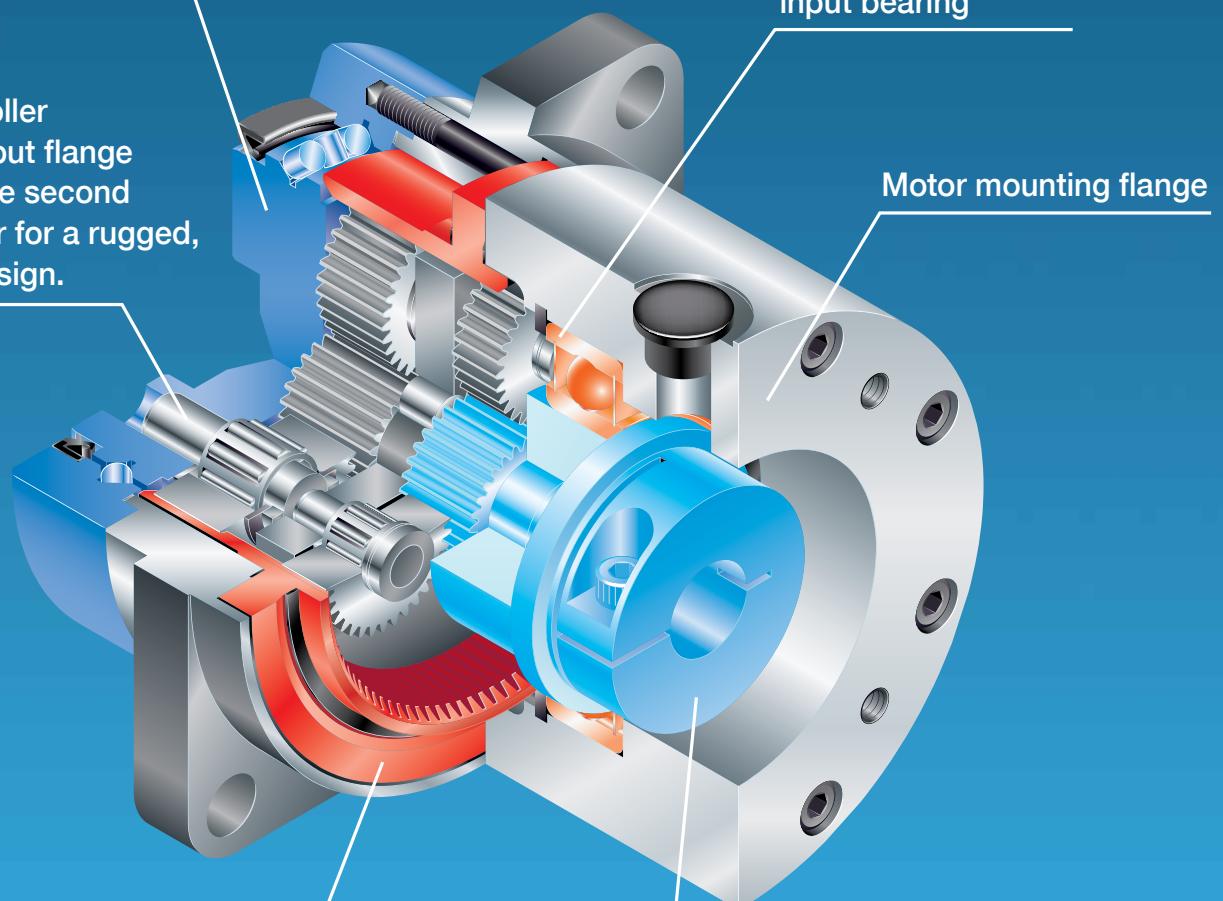

Backlash compensating internal gear

Quick Connect™ coupling for easy mounting of any servomotor



ELECTROMATE  
Robotic and Mechatronic Solutions

(877) 737-8698  
[sales@electromate.com](mailto:sales@electromate.com)  
[www.electromate.com](http://www.electromate.com)

## Output Bearing Specifications and Checking Procedure

A precision cross roller bearing supports the external load (output flange).

Check the maximum load, moment load, life of the bearing and static safety coefficient to maximize performance.

### Checking procedure

#### (1) Checking the maximum load moment load ( $M_{max}$ )

Obtain the maximum load moment load ( $M_{max}$ ).  Maximum load moment load ( $M_{max}$ )  $\leq$  Permissible moment ( $M_c$ )

#### (2) Checking the life

Obtain the average radial load ( $F_{av}$ ) and the average axial load ( $F_{ax}$ ).  Obtain the radial load coefficient (X) and the axial load coefficient (Y).  Calculate the life and check it.

#### (3) Checking the static safety coefficient

Obtain the static equivalent radial load coefficient ( $P_o$ ).  Check the static safety coefficient. ( $f_s$ )

### Specification of output bearing

**HPGP/HPG Series** Table 129-1, -2 and -3 indicate the specifications for gearbox, right angle and input shaft unit, and cross roller bearing.

Table 129-1

Size	Pitch circle	Offset amount	Basic rated load			Allowable moment load $M_c^{*3}$		Moment stiffness $Km^{*4}$		
	dp	R	Basic dynamic load rating $C^{*1}$	Basic static load rating $C_0^{*2}$	N	kgf	Nm	Kgfm	$\times 10^4$ Nm/rad	Kgfm/arc min
	m	m	N	kgf	N	kgf				
11	0.0275	0.006	3116	318	4087	417	9.50	0.97	0.88	0.26
14	0.0405	0.011	5110	521	7060	720	32.3	3.30	3.0	0.90
20	0.064	0.0115	10600	1082	17300	1765	183	18.7	16.8	5.0
32	0.085	0.014	20500	2092	32800	3347	452	46.1	42.1	12.5
50	0.123	0.019	41600	4245	76000	7755	1076	110	100	29.7
65	0.170	0.023	90600	9245	148000	15102	3900	398	364	108

Table 129-2

Size	Reduction ratio	Allowable radial load* <sup>5</sup>		Allowable axial load* <sup>5</sup>	
		N	N	N	N
11	5	280		430	
	(9)	340		510	
	21	440		660	
	37	520		780	
	45	550		830	
14	(3)	400		600	
	5	470		700	
	11	600		890	
	15	650		980	
	21	720		1080	
	33	830		1240	
	45	910		1360	
20	(3)	840		1250	
	5	980		1460	
	11	1240		1850	
	15	1360		2030	
	21	1510		2250	
	33	1729		2580	
	45	1890		2830	

\* The ratio specified in parentheses is for the HPG Series.

Table 129-3

Size	Reduction ratio	Allowable radial load* <sup>5</sup>		Allowable axial load* <sup>5</sup>	
		N	N	N	N
32	(3)	1630		2430	
	5	1900		2830	
	11	2410		3590	
	15	2640		3940	
	21	2920		4360	
	33	3340		4990	
50	45	3670		5480	
	(3)	3700		5570	
	5	4350		6490	
	11	5500		8220	
	15	6050		9030	
	21	6690		9980	
65	33	7660		11400	
	45	8400		12500	
	4	8860		13200	
	5	9470		14100	
	12	12300		18300	
	15	13100		19600	
(40)	20	14300		21400	
	25	15300		22900	
	(40)	17600		26300	
	(50)	18900		28200	

\* The ratio specified in parentheses is for the HPG Series.

\*1 The basic dynamic load rating means a certain static radial load so that the basic dynamic rated life of the roller bearing is a million rotations.

\*2 The basic static load rating means a static load that gives a certain level of contact stress (4kN/mm<sup>2</sup>) in the center of the contact area between rolling element receiving the maximum load and orbit.

\*3 The allowable moment load is a maximum moment load applied to the bearing. Within the allowable range, basic performance is maintained and the bearing is operable. Check the bearing life based on the calculations shown on the next page.

\*4 The value of the moment stiffness is the average value.

\*5 The allowable radial load and allowable axial load are the values that satisfy the life of a speed reducer when a pure radial load or an axial load applies to the main bearing. (Lr + R = 0 mm for radial load and La = 0 mm for axial load) If a compound load applies, refer to the calculations shown on the next page.



Figure 131-1

## How to calculate the maximum load moment load


**HPGP** **HPG** **CSG-GH**  
**CSF-GH** **HPF**

Maximum load moment load ( $M_{max}$ ) is obtained as follows.  
Make sure that  $M_{max} \leq M_c$ .

Formula 131-1

$$M_{max} = F_{r\ max}(L_r + R) + F_{a\ max} L_a$$

$F_{r\ max}$	Max. radial load	N (kgf)	See Fig. 131-1.
$F_{a\ max}$	Max. axial load	N (kgf)	See Fig. 131-1.
$L_r, L_a$	—	m	See Fig. 131-1.
R	Offset amount	m	See Fig. 131-1. See "Specification of main bearing" of each series

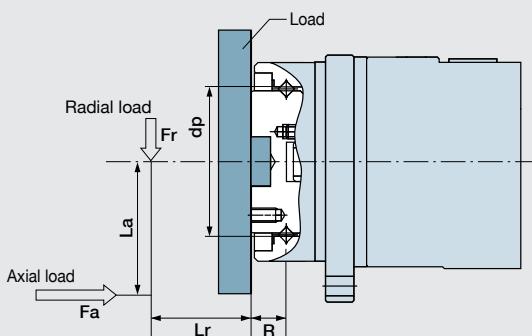

## How to calculate the radial load coefficient and the axial load coefficient

**HPGP** **HPG** **CSG-GH**  
**CSF-GH** **HPF**

The radial load coefficient (X) and the axial load coefficient (Y)

Formula 131-2

Formula	X	Y
$\frac{F_{a\ av}}{F_{r\ av} + 2(F_{r\ av}(L_r + R) + F_{a\ av} \cdot L_a) / dp} \leq 1.5$	1	0.45
$\frac{F_{a\ av}}{F_{r\ av} + 2(F_{r\ av}(L_r + R) + F_{a\ av} \cdot L_a) / dp} > 1.5$	0.67	0.67


  

$F_{r\ av}$	Average radial load	N (kgf)	See "How to obtain the average load."
$F_{a\ av}$	Average axial load	N (kgf)	See "How to obtain the average load."
$L_r, L_a$	—	m	See Fig. 131-1.
R	Offset amount	m	See Fig. 131-1. See "Output Shaft Bearing Specifications" of each series.
dp	Circular pitch of roller	m	See Fig. 131-1. See "Output Shaft Bearing Specifications" of each series.

## How to calculate the average load (Average radial load, average axial load, average output rotational frequency)

**HPGP** **HPG** **CSG-GH** **CSF-GH** **HPF**

If the radial load and the axial load fluctuate, they should be converted into the average load to check the life of the cross roller bearing.

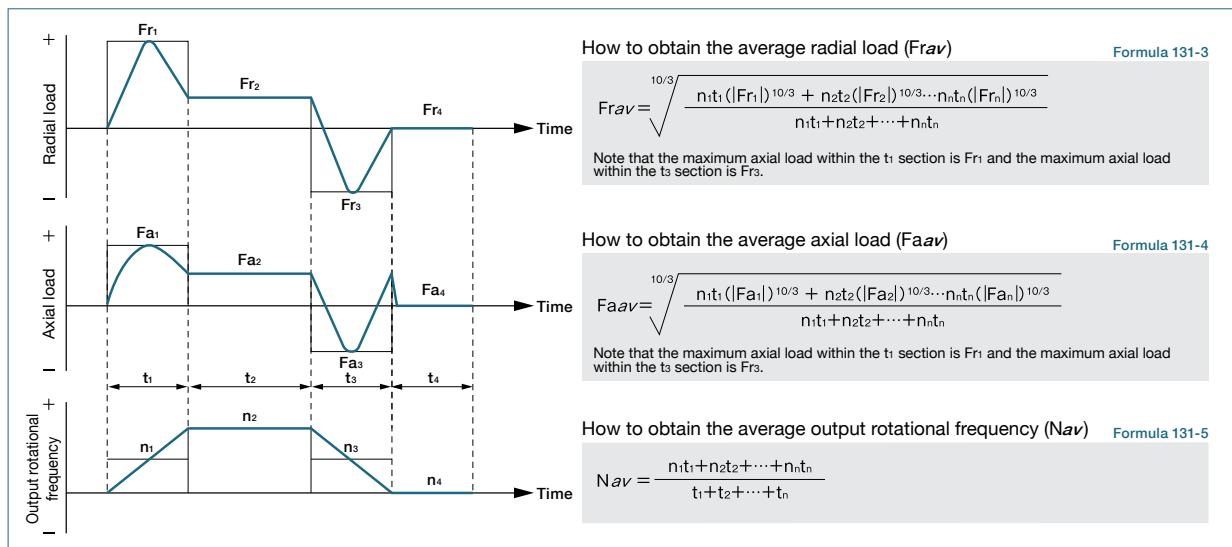

**How to calculate the life**

HPGP

HPG

CSG-GH

CSF-GH

HPF

Calculate the life of the cross roller bearing using Formula 132-1. You can obtain the dynamic equivalent radial load (Pc) using Formula 132-2.

Formula 132-1

$$L_{10} = \frac{10^6}{60 \times N_{av}} \times \left( \frac{C}{f_w \cdot P_c} \right)^{10/3}$$

<b>L<sub>10</sub></b>	Life	hour	—
<b>N<sub>av</sub></b>	Ave. output speed	rpm	See "How to calculate the ave. load."
<b>C</b>	Basic dynamic rated load	N (kgf)	See "Output Bearing Specs."
<b>P<sub>c</sub></b>	Dynamic equi. radial load	N (kgf)	See Formula 132-2.
<b>f<sub>w</sub></b>	Load coefficient	—	See Table 132-1.

**Load coefficient**

Table 132-1

Load status	f <sub>w</sub>
During smooth operation without impact or vibration	1 to 1.2
During normal operation	1.2 to 1.5
During operation with impact or vibration	1.5 to 3

$$P_c = X \cdot \left( F_{rav} + \frac{2(F_{rav}(L_r + R) + F_{aav} \cdot L_a)}{dp} \right) + Y \cdot F_{aav}$$

<b>F<sub>rav</sub></b>	Average radial load	N (kgf)	See "How to calculate the ave. load."
<b>F<sub>aav</sub></b>	Average axial load	N (kgf)	See "Output Bearing Specs."
<b>dp</b>	Circular pitch of roller	m	See "Output Bearing Specs."
<b>X</b>	Radial load coefficient	—	See "How to calculate the radial load coefficient and the axial load coefficient."
<b>Y</b>	Axial load coefficient	—	See Figure 131-1. See "External load influence diagram."
<b>L<sub>r</sub>, L<sub>a</sub></b>	—	m	See Figure 131-1. See "External load influence diagram" and "Output Bearing Specs" of each series.
<b>R</b>	Offset amount	m	See Figure 131-1. See "External load influence diagram" and "Output Bearing Specs" of each series.

**How to calculate the life during oscillating movement**

HPGP

HPG

CSG-GH

CSF-GH

HPF

Calculate the life of the cross roller bearing during oscillating movement by Formula 132-3.

Formula 132-3

$$Loc = \frac{10^6}{60 \times n_1} \times \frac{90}{\theta} \times \left( \frac{C}{f_w \cdot P_c} \right)^{10/3}$$

<b>Loc</b>	Rated life under oscillating movement	hour	—
<b>n<sub>1</sub></b>	No. of reciprocating oscillation per min.	cpm	—
<b>C</b>	Basic dynamic rated load	N (kgf)	See "Output Bearing Specs."
<b>P<sub>c</sub></b>	Dynamic equivalent radial load	N (kgf)	See Formula 132-2.
<b>f<sub>w</sub></b>	Load coefficient	—	See Table 132-1.
<b>θ</b>	Oscillating angle /2	Deg.	See Figure 132-1.

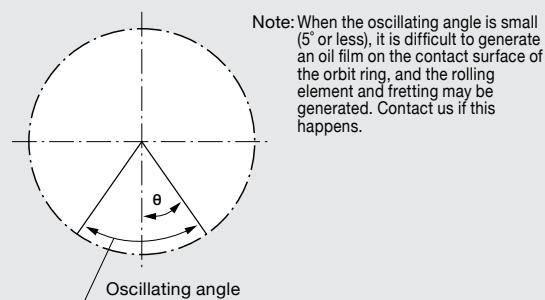


Figure 132-1

**Note** When it is used for a long time while the rotation speed of the output shaft is in the ultra-low operation range (0.02rpm or less), the lubrication of the bearing becomes insufficient, resulting in deterioration of the bearing or increased load in the driving side. When using it in the ultra-low operation range, contact us.

**How to calculate the static safety coefficient**

HPGP

HPG

CSG-GH

CSF-GH

HPF

In general, the basic static rated load (Co) is considered to be the permissible limit of the static equivalent load. However, obtain the limit based on the operating and required conditions. Calculate the static safety coefficient (fs) of the cross roller bearing using Formula 132-4.

General values under the operating condition are shown in Table 132-2. You can calculate the static equivalent radial load (Po) using Formula 132-5.

Formula 132-4

$$fs = \frac{Co}{Po}$$

<b>Co</b>	Basic static rated load	N (kgf)	See "Output Bearing Specs."
<b>Po</b>	Static equivalent radial load	N (kgf)	See Formula 132-5.

**Static safety coefficient**

Table 132-2

Load status	fs
When high rotation precision is required	≥3
When impact or vibration is expected	≥2
Under normal operating condition	≥1.5

Formula 132-5

$$Po = Fr_{max} + \frac{2M_{max}}{dp} + 0.44Fa_{max}$$

<b>Fr<sub>max</sub></b>	Max. radial load	N (kgf)	See "How to calculate the max. load moment load."
<b>Fa<sub>max</sub></b>	Max. axial load	N (kgf)	See "Output Bearing Specs" of each series.
<b>M<sub>max</sub></b>	Max. load moment load	Nm (kgfm)	See "Output Bearing Specs" of each series.



(877) 737-8698

sales@electromate.com

www.electromate.com

## Input Bearing Specifications and Checking Procedure

Check the maximum load and life of the bearing on the input side if the reducer is an HPG input shaft unit or an HPF hollow shaft unit.

### Checking procedure

HPG

HPF

#### (1) Checking maximum load

Calculate:

Maximum load moment load ( $M_{i\ max}$ )  
Maximum load axial load ( $F_{ai\ max}$ )  
Maximum load radial load ( $F_{ri\ max}$ )



Maximum load moment load ( $M_{i\ max}$ ) ≤ Permissible moment load ( $M_c$ )  
Maximum load axial load ( $F_{ai\ max}$ ) ≤ Permissible axial load ( $F_{ac}$ )  
Maximum load radial load ( $F_{ri\ max}$ ) ≤ Permissible radial load ( $F_{rc}$ )

#### (2) Checking the life

Calculate:

Average moment load ( $M_{i\ av}$ )  
Average axial load ( $F_{ai\ av}$ )  
Average input speed ( $N_{i\ av}$ )



Calculate the life and check it.

## Specification of input shaft bearing

The specification of the input side main bearing of the input shaft unit is shown below.

### Specification of input shaft bearing

HPG

Table 133-1

Size	Basic rated load			
	Basic dynamic rated load $C_r$		Basic static rated load $C_{or}$	
	N	kgf	N	kgf
11	2700	275	1270	129
14	5800	590	3150	320
20	9700	990	5600	570
32	22500	2300	14800	1510
50	35500	3600	25100	2560
65	51000	5200	39500	4050

Table 133-2

Size	Allowable moment load $M_c$		Allowable axial load $F_{ac}^{*1}$		Allowable radial load $F_{rc}^{*2}$	
	Nm	kgef	N	kgef	N	kgef
11	0.16	0.016	245	25	20.6	2.1
14	6.3	0.64	657	67	500	51
20	13.5	1.38	1206	123	902	92
32	44.4	4.53	3285	335	1970	201
50	96.9	9.88	5540	565	3226	329
65	210	21.4	8600	878	5267	537

### Specification of input shaft bearing

HPF

Table 133-3

Size	Basic rated load			
	Basic dynamic rated load $C_r$		Basic static rated load $C_{or}$	
	N	kgef	N	kgef
25	14500	1480	10100	1030
32	29700	3030	20100	2050

Table 133-4

Size	Allowable moment load $M_c$		Allowable axial load $F_{ac}^{*1}$		Allowable radial load $F_{rc}^{*3}$	
	Nm	kgef	N	kgef	N	kgef
25	10	1.02	1538	157	522	53.2
32	19	1.93	3263	333	966	98.5

#### [Note: Table 133-2 and 133-4]

\*1 The allowable axial load is the tolerance of an axial load applied to the shaft center.

\*2 The allowable radial load of HPG series is the tolerance of a radial load applied to the shaft length center.

\*3 The allowable radial load of HPG series is the tolerance of a radial load applied to the point of 20 mm from the shaft edge (input flange edge).




## ■ Calculating maximum load moment load to input shaft

The maximum load moment load ( $M_{imax}$ ) is calculated as follows.  
Check that the following formulas are established in all circumstances:

Formula 134-1			
$M_{imax} = F_{ri\ max} \cdot L_{ri} + F_{ai\ max} \cdot L_{ai}$			
<b><math>F_{ri\ max}</math></b>	Max. radial load	N (kgf)	See Fig. 134-1.
<b><math>F_{ai\ max}</math></b>	Max. axial load	N (kgf)	See Fig. 134-1.
<b><math>L_{ri}, L_{ai}</math></b>	—	m	See Fig. 134-1.

$$M_{imax} \leq M_c \text{ (Permissible moment load)}$$

$$F_{ai\ max} \leq F_{ac} \text{ (Permissible axial load)}$$

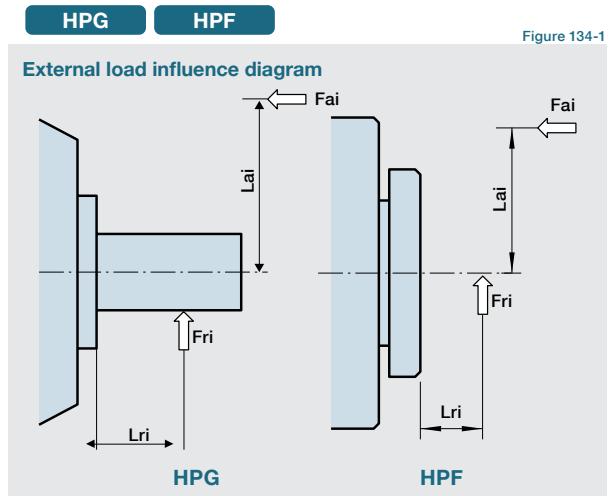


## ■ How to calculate average load

(Average moment load, average axial load, average input rotational frequency)

**HPG**

**HPF**

If moment load and axial load fluctuate, they should be converted into the average load to check the life of the bearing.

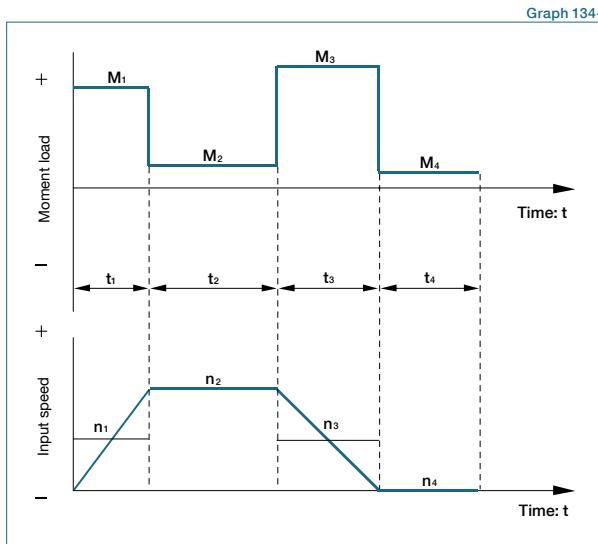

How to calculate the average moment load ( $M_{iav}$ )

Formula 134-2

$$M_{iav} = \sqrt[3]{\frac{n_1 t_1 (|M_1|)^3 + n_2 t_2 (|M_2|)^3 + \dots + n_n t_n (|M_n|)^3}{n_1 t_1 + n_2 t_2 + \dots + n_n t_n}}$$

How to calculate the average axial load ( $F_{iav}$ )

Formula 134-3

$$F_{iav} = \sqrt[3]{\frac{n_1 t_1 (|F_{ai1}|)^3 + n_2 t_2 (|F_{ai2}|)^3 + \dots + n_n t_n (|F_{ai_n}|)^3}{n_1 t_1 + n_2 t_2 + \dots + n_n t_n}}$$

How to calculate the average output rotational frequency ( $N_{iav}$ )

Formula 134-4

$$N_{iav} = \frac{n_1 t_1 + n_2 t_2 + \dots + n_n t_n}{t_1 + t_2 + \dots + t_n}$$

## ■ Calculating life of input side bearing

Calculate the bearing life according to Calculation Formula 132-5 and check the life.

Formula 134-5

$$L_{10} = \frac{10^6}{60 \times N_{iav}} \times \left( \frac{C_r}{P_{ci}} \right)^3$$

<b><math>L_{10}</math></b>	Life	Hour	—
<b><math>N_{iav}</math></b>	Average input rotational speed	rpm	See Formula 134-4
<b><math>C_r</math></b>	Basic dynamic rated load	N (kgf)	See Table 133-1 and -3
<b><math>P_{ci}</math></b>	Dynamic equivalent radial load	N	See Table 134-1 and -2

### Dynamic equivalent radial load

**HPG**

Table 134-1

Size	<b><math>P_{ci}</math></b>
11	$0.444 \times M_{iav} + 1.426 \times F_{iav}$
14	$0.137 \times M_{iav} + 1.232 \times F_{iav}$
20	$0.109 \times M_{iav} + 1.232 \times F_{iav}$
32	$0.071 \times M_{iav} + 1.232 \times F_{iav}$
50	$0.053 \times M_{iav} + 1.232 \times F_{iav}$
65	$0.041 \times M_{iav} + 1.232 \times F_{iav}$

### Dynamic equivalent radial load

**HPF**

Table 134-2

Size	<b><math>P_{ci}</math></b>
25	$121 \times M_{iav} + 2.7 \times F_{iav}$
32	$106 \times M_{iav} + 2.7 \times F_{iav}$

$M_{iav}$  Average moment load Nm (kgfm) See Formula 134-2

$F_{iav}$  Average axial load N (kgf) See Formula 134-3



**(877) 737-8698**

sales@electromate.com

www.electromate.com

## Harmonic Drive LLC

**Boston US Headquarters**  
247 Lynnfield Street  
Peabody, MA 01960

**New York Sales Office**  
100 Motor Parkway  
Suite 116  
Hauppauge, NY 11788

**California Sales Office**  
333 W. San Carlos Street  
Suite 1070  
San Jose, CA 95110

**Chicago Sales Office**  
137 N. Oak Park Ave., Suite 410  
Oak Park, IL 60301

**T: 800.921.3332**  
**T: 978.532.1800**  
**F: 978.532.9406**  
[www.HarmonicDrive.net](http://www.HarmonicDrive.net)

**Group Companies**  
Harmonic Drive Systems, Inc.  
6-25-3 Minami-Ohi, Shinagawa-ku  
Tokyo 141-0013, Japan

Harmonic Drive AG  
Hoenerbergstrasse, 14, D-6555  
Limburg/Lahn Germany

Harmonic Drive® and HarmonicPlanetary® are registered trademarks and Quick Connect is a trademark of Harmonic Drive LLC. All other trademarks are property of their respective owners.

