# **Dynatec® Controls**

# Dynatec® 2750 Control

Accel/Decel Dual Channel Clutch/Brake Control



### Description

The Dynatec® 2750 (D2750) is a solid-state, digitally designed accel/decel clutch/brake controller, engineered to precisely operate 90 VDC clutch/brake (C/B) coils with current loads of up to 1.0 amp and din rail mounting for ease of installation.

This controller operates one or two coils, incorporating an anti-overlap circuit.

The D2750 controller employs technology to ensure long life and reliable service: The D2750 incorporates voltage protection on the AC input. When transient voltage spikes or notching is present on AC lines, an isolation transformer is required to filter the incoming power to the D2750.

### **Specifications**

Power Input

Voltage 115 VAC Current 1.5 amp Frequency 50/60 HZ

Fusing Customer-supplied 2 amp

Power Output

Voltage 0-90 VDC Current 1.0 amp Max. D2750 with Subpanel Dimensions

Weight 18 oz.

Overall 2.76" H. x 3.94" H. x 5.28" D.

**Temperature** 

Operating:  $0^{\circ}$  to  $65^{\circ}$ C ( $32^{\circ}$  to  $149^{\circ}$ F)

### **Features**

- Meets **SL** Certification
- Soft-Start and Soft-Stop (Ramps output from 0-2 seconds)
- Anti-Overlap Circuit
- 115 VAC Input
- Selective Input Switching Logic Contact or Opto-Isolated 3-30 VDC or 115 VAC
- Status/Diagnostic lights:

Clutch On Brake On

Input Logic	Part No.
115 VAC, 50/60 Hz	214257-040-2230
3-30 VDC	214257-040-2231
Contact Closure	214257-040-2232



## **Dynatec® Controls**

### D2750 Anti-Overlap

When using conventional controls where the output voltage is switched by a relay contact, overlap occurs when you see the arching across the contacts. This indicates that just for an instant the brake and clutch are both engaged. This graph represents overlap. The effect of this is excessive wear and heat to the clutch/brake system.

The Dynatec® 2750 incorporates MOV's and time delay logic that will prevent the effects of overlap. This graph illustrates the effects of anti-overlap. Notice the difference between the RPM curves. You have a shorter time to speed and time to zero, and the switching is more precise, creating less heat. These controls can actually operate the clutch/brake system at higher cycle rates, with better repeatability and less heat than conventional controls.

### D2750 Soft-Start/Soft-Stop


This feature is used to cushion the engagement of the clutch and brake by ramping the voltage. This graph displays the RPM curve of a clutch brake package with No Soft-Start/Soft-Stop.

The Dynatec® 2750 incorporates a Soft-Start/Soft-Stop feature. This illustration displays the voltage ramping up and ramping down. The ramp time is adjustable by turning the Soft-Start potentiometer for clutch and Soft-Stop for brake and can be adjusted from 0 to 2 seconds, which is the elapsed time from 0 to 90 VDC. There are several factors that are taken into consideration when using this feature: Inertia, Cycle Rate, RPM and Load Torque.


Adjust the clutch or brake potentiometer to the desired ramp time.

# Supply Voltage 90 V DC Clutch On Off On Off


Clutch/Brake Shaft RPM Curve using Conventional Control

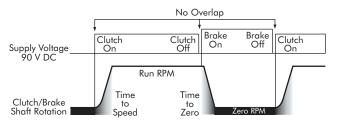

Clutch/Brake Shaft RPM Curve using Dynacorp® Control with Anti-Overlap




Clutch/Brake Shaft RPM Curve using Conventional Control



Clutch/Brake Shaft RPM Curve using a Dynacorp® Control with Soft-Start and Soft-Stop


# **D2750 Wiring Information**

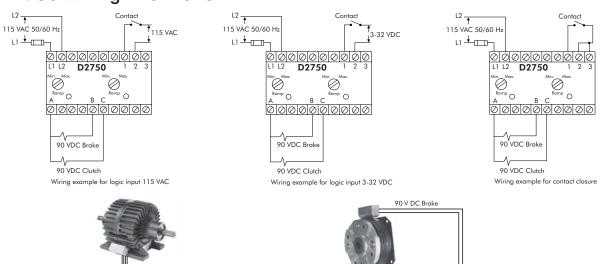

Dynacorp® Clutch/Brake Package Wiring

White Wire Clutch

Orange Wire
White Wire Clutch

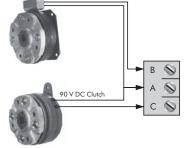

Single Clutch and Brake Wiring



Toll Free Phone (877) SERV098 Toll Free Fax (877) SERV099 www.electromate.com5 sales@electromate.com